



Easy at last!

The flow sensors from FlowVision
for all Ex-zones




zone 0

zone 1

zone 1

zone 2

   zone 2

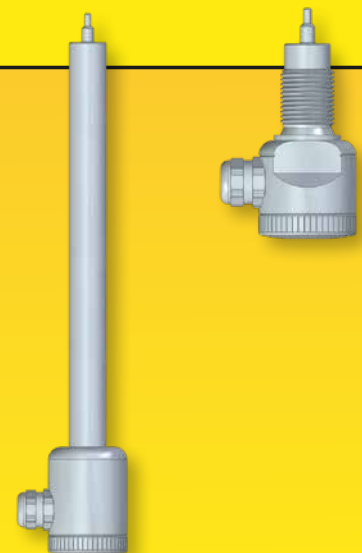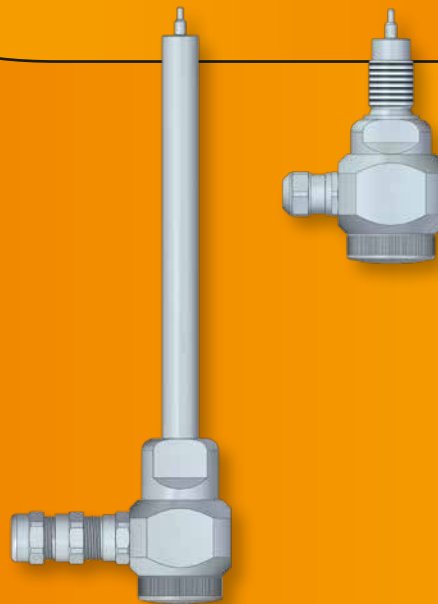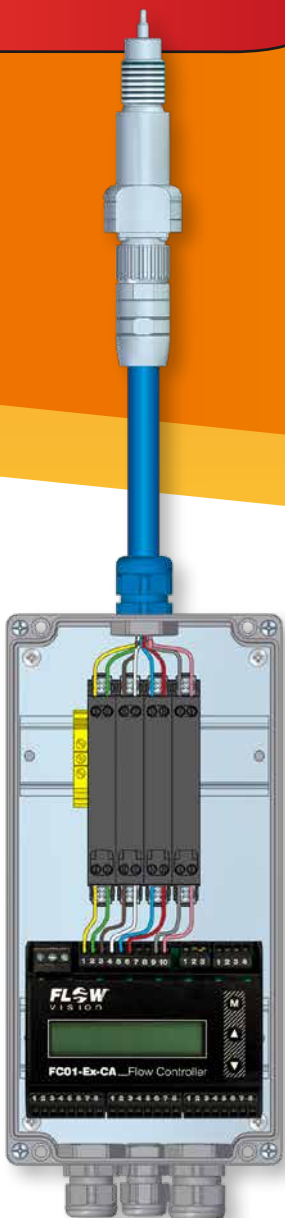

ZONE 0 | ZONE 20

	gases	dust
category 1	zone 0 ✓	zone 20 ✓
category 2	zone 1 ✓	zone 21 ✓
category 3	zone 2 ✓	zone 22 ✓



Flow meter FC01-EX

(water, oil, special fluids)

Mass flow meter FC01-EX-CA

(gases)

ZONE 1 | ZONE 21

	gases	dust
category 1	zone 0	zone 20
category 2	zone 1 ✓	zone 21 ✓
category 3	zone 2 ✓	zone 22 ✓



Flow monitor FS10-dbEX

(switching point)

Flow monitor FS20-dbEX

(switching point)

Flow meter FC50-dbEX

(analogue output + switching point)

Mass flow meter FC50-dbEX-CA

(analogue output + switching point)

Mass flow meter FVone-dbEX-NP-CA

(all-in-one, freely scalable)



ZONE 2 | ZONE 21

	gases	dust
category 1	zone 0	zone 20
category 2	zone 1	zone 21 ✓
category 3	zone 2 ✓	zone 22 ✓



Flow monitor FS10-EX

(switching point)

Flow monitor FS20-EX

(switching point)

Flow meter FC50-EX

(analogue output + switching point)

Mass flow meter FC50-EX-CA

(analogue output + switching point)

Mass flow meter FVone-EX-NP-CA

(all-in-one, freely scalable)



FlowVision GmbH

Im Erlen 6
90518 Altdorf

Telefon 0049 (9187) 9 22 93-0
Telefax 0049 (9187) 9 22 93-29

info@flowvision-gmbh.de
www.flowvision-gmbh.de